



# 180

REVERSIBLE STROLLER

SNACK TRAY

INSTRUCTION MANUAL



More tips and videos on  
[ergobaby.com](http://ergobaby.com)

**IMPORTANT: KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE AND READ THEM CAREFULLY BEFORE USE. FAILURE TO FOLLOW THESE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.**

## **⚠️ WARNING**

### **PREVENT SERIOUS INJURY OR DEATH:**

- NEVER leave your child unattended
- Stroller must be fully erected and locked in position prior to use.
- Do not use the Ergobaby 180 Reversible Stroller with the 180 Reversible Stroller Snack Tray unless you have read all the instruction manuals for both products and understand how to use them properly.
- Do not use the snack tray if any part is damaged, broken, torn or missing. Use only replacement parts supplied and approved by the manufacturer. If the instruction manual is missing or you need replacement parts or assistance, see the contact information included with this product.

### **FALL HAZARD: Avoid serious injury from falls, sliding out, or tip over**

- DO NOT lift or carry stroller by the sunshade or snack tray.
- ALWAYS make sure the snack tray is completely locked onto the stroller before use. You will hear a “CLICK” when the snack tray is correctly engaged. Check that the snack tray is locked by lifting up on each side.
- Do not place more than 2 lb (1 kg) in the snack tray.

---

### **CLEANING INSTRUCTIONS**


Avoid excessive exposure to sun or heat, which may cause fading or warping. The snack tray may be wiped clean with a damp cloth. Never use bleach or detergents to clean this product. Tray is top rack dishwasher safe or can be hand washed.

**Warranty:** Please see [Ergobaby.com](http://Ergobaby.com) for information about our warranty. The ERGO Baby Carrier, Inc. warrants its products against defects in materials and workmanship. We stand behind all our products and will either repair or replace, free of charge during the first 12 months after purchase, any Ergobaby™ stroller accessory that is defective. Proof of purchase is necessary and product must be returned for warranty service. Should you have a warranty claim, please contact Ergobaby Customer Service at: [customerservice@ergobaby.com](mailto:customerservice@ergobaby.com), or 888-416-4888.

Warranty Coverage does not extend to damage caused by misuse or any use of the Stroller Accessory that is not in accordance with the instructions stated in this manual. Warranty coverage does not extend to any Stroller Accessory that has been modified from its original construction in any way. Different or additional warranty rights may exist in the purchaser's jurisdiction. To the extent that different or additional warranty rights exist under the laws of the purchaser's jurisdiction, those warranties shall apply and be in addition to the warranty rights.

---

## **OVERVIEW**



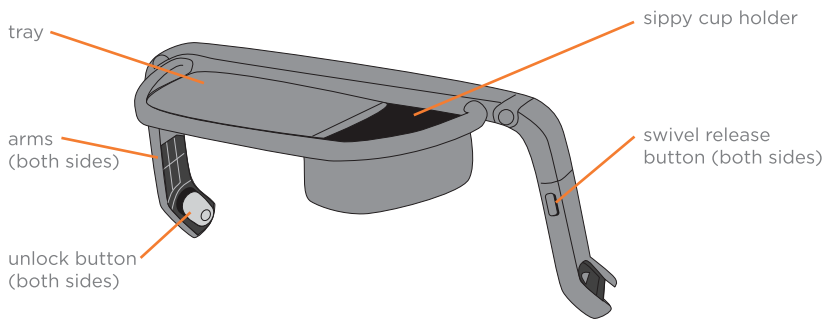


**THE ERGOBABY CARRIER, INC.**

US: 617 West 7th St., Ste. 1000, Los Angeles, CA 90017 | (888) 416-4888 | [info@ergobaby.com](mailto:info@ergobaby.com)



IM-180ST-170614-V1

## 1. HOW TO ASSEMBLE THE SNACK TRAY

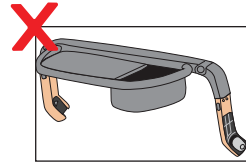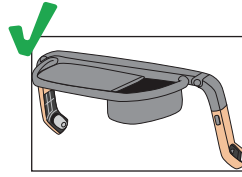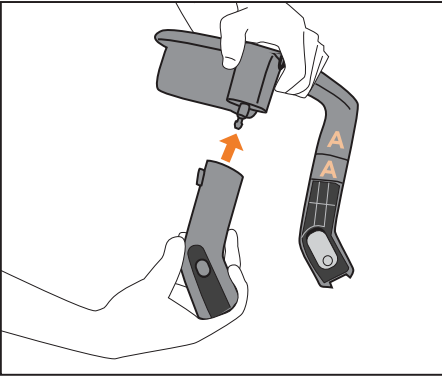




Align the arms in the correct orientation as shown above. Make sure the letters “A” and “B” on the tray match with the corresponding arms. Insert the metal rod on the tray into the top of the arm until you hear a “CLICK”.

## 2. HOW TO INSTALL THE SNACK TRAY

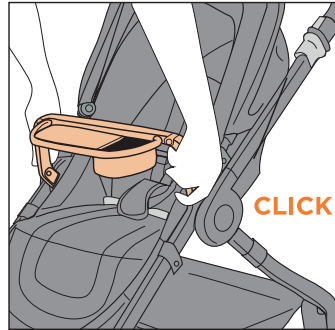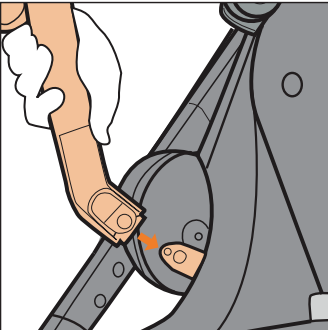



Align each arm of the snack tray with the docks on the central hubs of the stroller. Push the snack tray down until you hear a “CLICK” from each arm.

### 3. HOW TO SWING OPEN AND SWIVEL THE SNACK TRAY

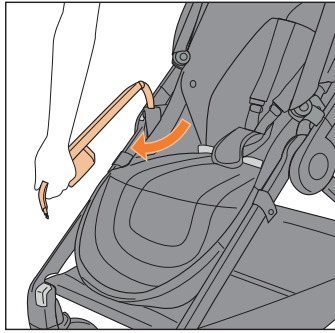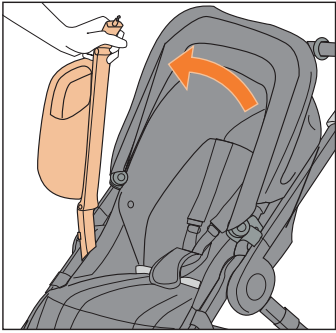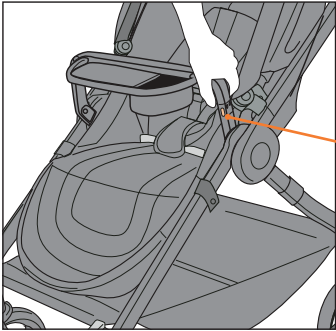

Press the swivel release button and pull the tray upward. The tray can swing up and swivel out of the way to make it easier to get your child in and out of the stroller. For safety, tray should be fully re-attached or fully removed before folding.

### 4. HOW TO REMOVE THE SNACK TRAY FROM THE STROLLER

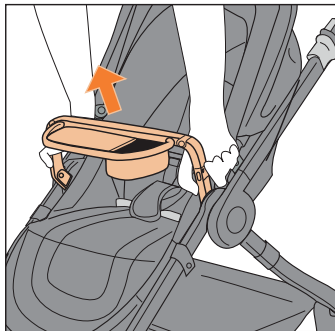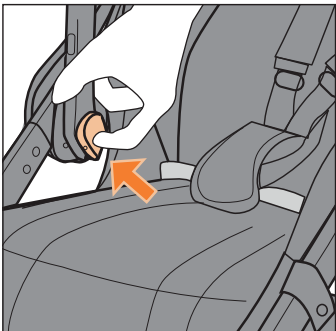

Locate the unlock buttons on each arm of the snack tray. Press the buttons and pull the snack tray away from the stroller.